

PET TOOL CARE

Cleaning your Wahl clippers blades

WAHL®

EVERYDAY CLEANING



Your tools should be cleaned after every time you use them.



Start by brushing off excess hair on your blades.



Make sure you oil your blades after cleaning them with Wahl Blade Oil.

PET TOOL CARE


Cleaning your Wahl clippers blades

WAHL®

ONCE A MONTH CLEANING



Your Clipper blades should be removed periodically (at least once a month) to allow the cut hair to be cleaned out from under the blades.

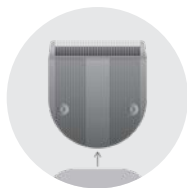

Simply use a screwdriver to undo the blade screws and then remove the blades. If your clipper has a detachable blade, just snap it off. Remove the sponge and clean it plus any hair that is caught in the clipper. Reverse the process to re-attach the blades.

All Wahl Clippers are tested before they leave our factory. Often testing materials or grinding compound may be found on the blades. This is easily cleaned off using the enclosed blade cleaning brush.

PET TOOL CARE

Oiling your Wahl clippers blades

WAHL®

HOW TO OIL YOUR BLADES



With the blade directed downwards, turn the clipper/trimmer on.



Apply three drops of oil – one on each side and one in the middle.



Turn off clipper/trimmer and blot excess oil with clean towel.

Always use Wahl Clipper Oil on your Wahl tools as it is specifically designed to extend the life of your blades.